



Purity Saunas™



Instruction Manual

TABLE OF CONTENTS

INSTALLATION

ELECTRICAL REQUIREMENTS	3
UNPACKING YOUR SAUNA	4
ECLIPSE AND SOLSTICE INSTALLATION INSTRUCTIONS	5-7
EQUINOX INSTALLATION INSTRUCTIONS	8-10

HOW TO USE

CONTROL PANEL INSTRUCTIONS	11
DISCLAIMER	12
WARRANTY AND RETURN POLICY INFORMATION	13

Note:

The electric cord extends out from the top roof. The cord is approximately 9ft long. It is recommended that the location of the outlet you are installing be above 75", which is the height of the sauna. A dedicated outlet requires that no other appliance should share outlet/circuit with sauna. Failure to comply with this requirement may cause electrical interruption and diminished sauna performance. It is recommended that a qualified electrician install your dedicated electrical wiring for proper sauna function and to avoid any potential electrical hazards.

ELECTRICAL REQUIREMENTS

Eclipse: 110-120volts/15amp dedicated circuit/outlet

NEMA 5-15R (required)



NEMA 5-15P (included)



1670-watts

Solstice: 220-240volts/20amp dedicated circuit/outlet

NEMA 6-20R (required)



NEMA 6-20P (included)



2690-watts

Equinox: 220-240volts/20amp dedicated circuit/outlet

NEMA 6-20R (required)



NEMA 6-20P (included)



3060-watts

WARNING:

- 1) No plumbing or plumbing fixtures should be placed in the sauna.
- 2) Keep all liquids away from the heating panels.
- 3) Install sauna on a completely level surface.
- 4) Install sauna in an area that is dry and protected from the weather. Sauna is for in home use only.
- 5) Flammable objects and corrosive chemical substances should be kept far away from the sauna.

Part A: Installation

Unpacking your Sauna

Please identify the 3 boxes (A/B/C) that arrived in your shipment. Place boxes in an open area. All 3 boxes are labeled with the contents inside. It is recommended that a minimum of 2 people be present for unpacking and assembly. Lay boxes flat on the ground with lettering facing up. Please make sure the area is clear of debris. Please remove the temporary wood braces (top and bottom of glass door) by removing screws.



Eclipse & Solstice Sauna

Step 1: Lay the floor panel at your desired location. Please make sure the plug is located in the right rear.



Step 2: Install the Back panel first by sliding the panel onto the wood grooves on the floor panel. Connect the plug in. Next install the Left Side panel by the same method used for the Back panel. At this point, secure the two panels together by installing metal bracket and screws in the pre-drilled holes located at the top corner of the panels.



Step 3: Install Right panel to Back Panel. Secure Right Side Panel to Back Panel by securing the two panels together by installing metal bracket and screws in the pre-drilled holes located at the top corner of the panels. There is a small piece of glass in the accessories box that needs to be installed on the corner of the Front Left Panel before attaching it to Left Side Panel. Install Front Left Panel to Left Side Panel. Secure Front Left Panel to Left Side Panel by securing the two panels together by installing metal bracket and screws in the pre-drilled holes located at the top corner of the panels.



Step 4: There is a small piece of glass in the accessories box that needs to be installed on the corner of the Front Right Panel (with Glass) before attaching it to Right Side Panel. Secure Front Right Panel (with Glass) to Right Side Panel by using metal bracket and screws in pre-drilled holes on the top corner of the panels. Again, ensure at this point that all metal brackets in pre-drilled holes on top corner of the panels have been secured by screws.



Step 5: Install Top Roof Panel, making sure to feed all the connections thru the holes on the Top Roof Panel. Make all corresponding connections. Secure Top Roof Panel by installing screws in the pre-drilled holes throughout Top Panel.



Step 6: Install Top dust cover, feeding the power cord thru the existing hole. Install Bench Panel. Install Door handle. Please install accessories at your desired location. Sauna is complete. Please refer to page 11 for "How to Use" Sauna.



Equinox Sauna

Step 1: Lay the floor panel at your desired location, making sure that the floor plug is located in the left rear.



Step 2: Install Back Panel to Floor Panel, plug in connector at bottom. Next, install Right Panel to Back Panel. Secure Right Panel to Back Panel by installing metal bracket and screws in the pre-drilled holes located at the top corner of the panels.




Step 3: Install Left Side Panel to Back Panel, secure 2 Panels by installing metal bracket and screws in pre-drilled holes on the top corner of the panels. Next, install Front Right Panel (with glass) to Right Side Panel. Again secure 2 Panels by installing metal bracket with screws in pre-drilled holes located at the top corner of the panels.




Step 4: Install Left Glass Panel by sliding it into wood grooves on Floor Panel.




Step 5: Install Top Panel, making sure to feed all the connections thru the holes on the Top Panel. Make all corresponding connections. Secure Top Panel by installing screws in the pre-drilled holes throughout Top Panel.

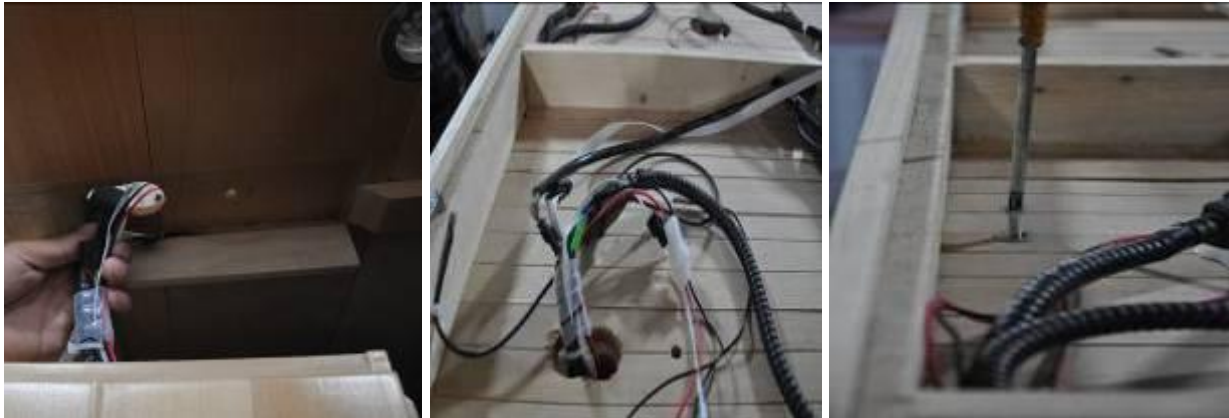

Step 6: Install Top dust cover, feeding the power cord thru the existing hole. Install Bench Panels. Install Door handle. Please install accessories at your desired location. Sauna complete, please refer to page 11 for “How to Use” Sauna.

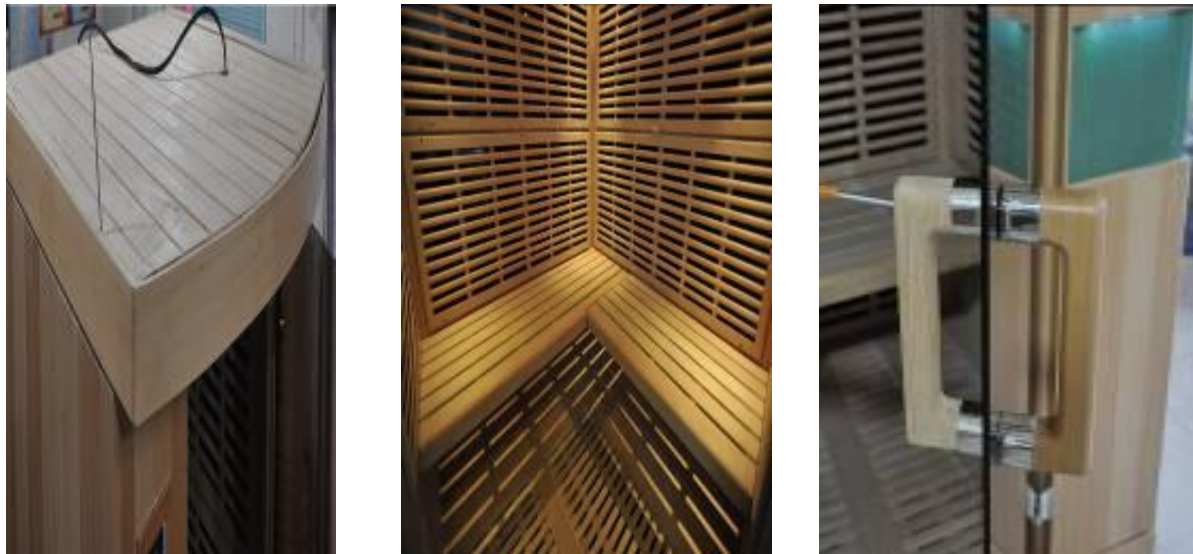

Part B: How to Use

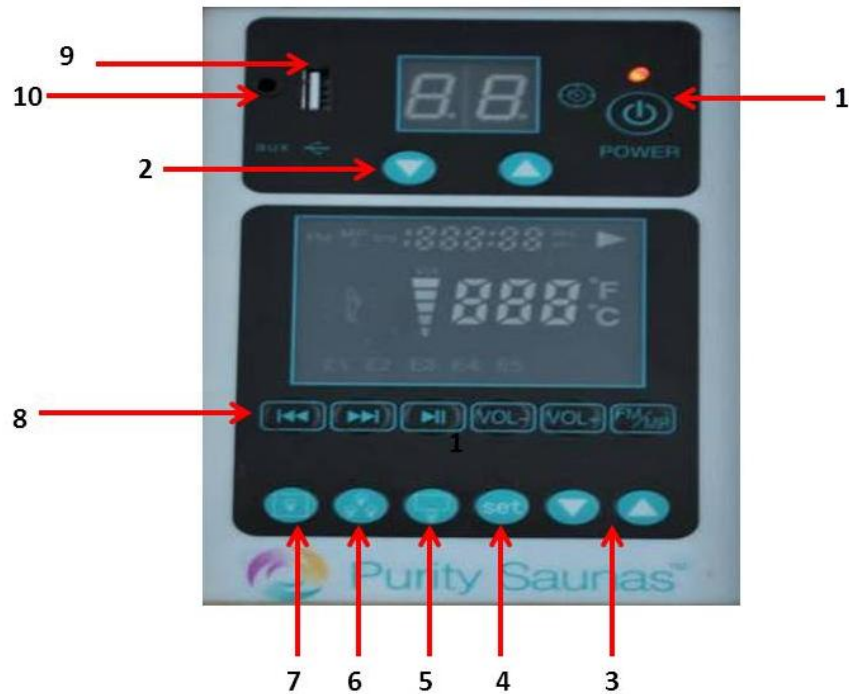

1. Power (On/Off)
2. Time- Adjust time: Typical sauna session is 30-45min
3. Temp- Adjust temp: Optimal Infrared Therapy is between 110F-135F
4. Set- Press to change Fahrenheit to Celsius
5. Outside Light
6. Chromo-Therapy Lights- Press once for colors to cycle. Press more than once to choose specific color. Hold 3 seconds to turn off.
7. Inside Light
8. Audio Controls: Press Play/Pause button to operate. Use forward/reverse buttons to set station. Press FM/MP to switch between FM and USB Flash Drive.
9. USB Port for Pre-loaded MP3 files on Flash Drive.
10. Aux Port: Please use 3.5mm male to male audio cable to connect IPOD/MP3 player. Press FM/MP button to set to FM then press Play/Pause button. You can now use your won IPOD/MP3 controls.

Programmable Timer Function: Press and hold power button for 5 seconds, the time display will blink (use time buttons to adjust) the number corresponds to the amount of hours in the future you would like sauna to turn on. After setting time the display will turn off but the power indicator light will continue to blink. To cancel Auto Timer press and hold power button for 5 seconds and it will stop blinking.

Disclaimer

Purity Saunas Inc. and its associates do not provide medical guidance. Consult a doctor for medical advice. All of the information contained in this catalogue is for information purposes only. We reserve the right to change, without notice, anything contained within the catalogue. Purity Saunas Inc. shall not be held responsible for printing variations. Color variations may occur. Please consult your physician if you are taking medications

- 1. Please do not use sauna if under the influence of alcohol or drugs.**
- 2. Do not use sauna if you are pregnant.**
- 3. Do not allow animals inside sauna room.**
- 4. Minor children should be supervised in order to prevent injury.**
- 5. Do not use sauna for drying clothes, bathing suits etc.**
- 6. Do not expose heaters to moisture.**
- 7. Do not use for any other purpose than originally designed and intended.**

Purity Saunas Inc. and any of its subsidiaries and/or associates shall not be held responsible for any misuse of the sauna by the customer. Purity Saunas Inc. shall not be held liable for any damage and/or injury caused by customer misuse of product.

Warranty/Return Policy

Lifetime Warranty

We are so confident about our product, we offer a Lifetime Warranty on cabinetry, electrical, and heating panels. Just call or email a Customer Service Representative for any replacement parts. Purity Saunas Inc. will perform all labor at our factory free of charge during the warranty period. Warranty does not cover in home labor/service support. Customer is responsible for shipping warranted parts to Purity Saunas Inc. at their expense. Customer may elect to have replacement parts shipped to them when applicable in lieu of labor at the factory. The warranty is deemed void if the sauna has been misused, altered or left exposed to the elements of weather.

Cancellations/Returns

Buyer may cancel and return the goods to Seller, subject to the terms and conditions of this policy. Buyer shall assume all risk of loss associated with the return as well as shipping, handling, restocking and other fees, costs and expenses as described in this policy. Seller reserves the right to refuse to refund any deposit or payment, or cancel any payment due, and any owing until such time as Seller a) is in receipt of the goods b) has inspected the goods and c) in the Seller's discretion, has found the goods to be free of damage. All returned goods must be in their original packaging. Seller may refuse to refund all or any portion of any payment, or cancel payment due and owing if the Buyer fails to fully comply with or violates the terms and conditions of this policy. All cancelled or returned goods shall be subject to a) storage fees and costs associated with routing the goods b) handling and restocking fee in the amount of \$495.00 USD for each sauna c) all shipping costs to and from the Seller and d) Seller providing a return merchandise authorization (RMA) number. Buyer's failure to obtain the RMA number shall result in Seller not accepting any returned shipment and Buyer paying all costs and fees. All such costs and fees as determined by Seller shall be paid by Buyer to Seller upon demand by Seller.